



## **BRUKERMANUAL**

AUTOMATISK LED-LYS KONTROLLER


PARTNR: 105005

## Produktinformasjon

Helautomatisk, sensorstyrt belysning av trappen. La lyset slå seg automatisk på når du går inn i trappen og slukkes etter deg når du går, og spar strøm samtidig som du alltid har lyset der du trenger det, når du trenger det.

### Pakkens innhold:

- 1 stk Kontrollenhet
- 6 m Sensor-kabler
- 2 stk IR-sensorer
- 1 stk Strømforsyning
- 1 stk Manual

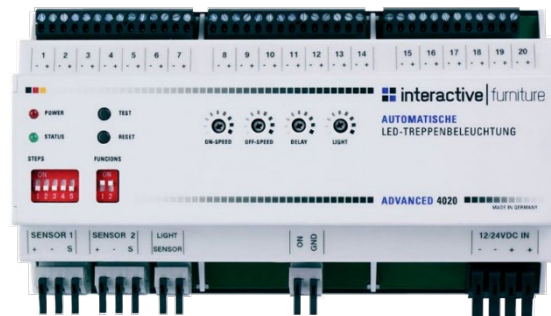

## Spesifikasjoner

Beskrivelse	MIN	TYP	MAKS	Enhet
Effekt per LED utgang	-	-	500	mA
Antall utganger	-	-	20	stk
Last fra kontrollmodul (ved 12V)	0.05	-	7,5	A
Inngangsspenning	7	12	24	V
Strømforbruk	-	0.25	-	W
Brukstemperatur	0	+20	+40	C°

Tilkoblinger LED	MIN	TYP	MAKS	Enhet
Tverrsnitt for kabel solid kjerne	-	-	1.5	mm <sup>2</sup>
Tverrsnitt for tvinnede kabler	-	-	1.0	mm <sup>2</sup>
Lengde for avisolering	-	5	-	Mm
Kraft på festeskruer	-	-	0.15	Nm

Fjærbelastede tilkoblinger LED kontroller	MIN	TYP	MAKS	Enhet
Tverrsnitt	-	-	1.5	mm <sup>2</sup>
Lengde for avisolering	6	-	10	mm

Fjærbelastede tilkoblinger sensor	MIN	TYP	MAKS	Enhet
Tverrsnitt	0.2	-	0,75	mm <sup>2</sup>
Lengde for avisolering	6	-	7	mm



Brukte elektriske og elektroniske produkter, deriblant alle typer batterier, skal leveres til gjenvinning på eget innsamlingssted. (I henhold til direktiv 2012/19/EU og 2006/66/EC).

---

1 Overview.....	4
1.1 Description of the control unit .....	4
1.2 Components .....	5
2 Installation.....	6
2.1 Installation of the sensors .....	6
2.2 Connecting the sensors .....	7
2.3 Connecting LED-illuminants .....	7
2.4 Connection of the twilight sensor .....	8
2.5 Connecting the external switch for the continuous light function .....	8
2.6 Connecting the power supply.....	8
2.7 Correct use of the connection terminals.....	9
3 Configuration of the control unit .....	10
3.1 Entering number of stairs (STEPS).....	10
3.2 Calibrating the on and off switching speed.....	11
3.3 Calibrating of the pause between the switch-on and switch-off process.....	11
3.4 Activation and calibration of the twilight sensor .....	11
3.5 Function "1st step illumination" .....	12
3.6 Function "Quick Start" .....	12
3.7 RESET-key .....	12
3.8 TEST-key .....	12
3.9 Status-LEDs .....	12
4 Further hardware features .....	13
4.1 Ambient lightning .....	13
4.2 Internal fuses.....	13
4.3 Bus connections.....	14
5 Further information.....	14
5.1 Correct usage.....	14
5.2 Operating conditions and safety instructions .....	14
5.3 Disposal instructions .....	15
5.4 Warranty and liability.....	15
5.5 EG-Conformity (CE mark) .....	16

## 1 Oversikt

Vennligst sørg for at du har lest bruksanvisningen fullstendig før du begynner installasjonen – spesielt seksjon 5 (Driftsforhold og sikkerhetserklæringer).

### 1.1 Beskrivelse av kontrollenheten


Dette belysningssystemet tillater sensorstyrt, sekvensiell aktivering av LED-lys. Timing og hastighet kan hensiktsmessig reguleres ved hjelp av bryterne på framsiden av modulen. Allsidigheten er ytterligere forbedret med mulighet for å koble til en lyssensor samt en bryter for permanent belysning.

Takket være den modulære utformingen av kontrollenheten kan funksjonsutvalget også utvides enkelt og kostnadseffektivt.

De robuste komponentene, samt de mange integrerte beskyttelseskretsene til kontrollenheten, sikrer en sikker og langvarig drift. Høykvalitets innkapsling med skinnefeste (DIN43880) åpner for en sikker og vedlikeholdsfri installasjon.

Det er også gitt spesiell oppmerksomhet til miljøhensyn. Gjennom bruk av høykvalitets komponenter utgjør strømforbruket til kontrollmodulen (inkludert sensorer) bare 0,5 watt. Modulen er produsert i Tyskland i samsvar med lovens krav. Ingen miljøfarlige materialer er brukt i produksjonen av dette produktet.

## 1.2 Komponenter

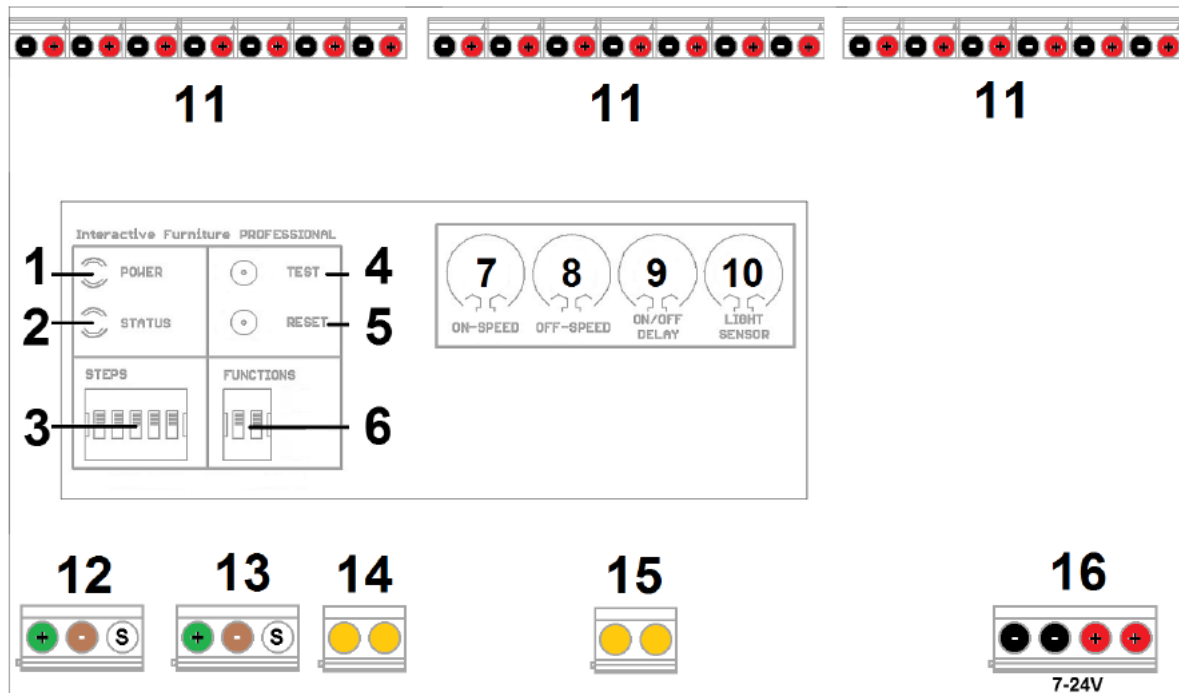

N1	Beskrivelse
1	POWER-LED – lyser når tilkoblet
2	STATUS-LED – indikerer modulens status
3	Brytere for justering av antall lyspunkter/trinn
4	Knapp for å aktivere alt lys
5	Knapp for å kalibrere sensorer
6	Funksjonspanel for å aktivere valg
7 + 8	Justering av PÅ/AV-tid for lys
9	Justering for hvor lenge lyset skal være aktivt
10	Justering av lysstyrke for lyssensor
11	Tilkobling for LED-lys
12	Tilkobling for SENSOR 1 – Begynnelsen av trappen
13	Tilkobling for SENSOR 2 – Slutten av trappen
14	Tilkobling for lyssensor
15	Tilkobling for lysbryter (permanent lys)
16	Strømtilkobling (7-24V)

## 2 Installasjon

De følgende avsnitt beskriver installasjonsprosessen og gir sidehenvisninger for trinnene involvert i montering av styringsmodulen. Dersom du har ytterligere spørsmål angående installasjon av denne modulen, kan du kontakte oss. E-post: [post@promitto.no](mailto:post@promitto.no).

### 2.1 Installasjon av sensorer

Hvis du bruker de medfølgende IR-sensorer:

Sensorene som medfølger oppdager bevegelse og aktiverer modulen. I motsetning til konvensjonelle lyssensorer som krever reflektorer, er denne modellen kun festet til den ene siden av trappen, og kan dermed brukes til trapper med en vegg på bare én side. Én sensor må monteres både på toppen og i bunnen av trappen. Test optimal sensor posisjon før montering. Rekkevidden til sensoren er omtrent en meter.

To installasjonsalternativer:

1. Plassering av sensor i høyden av første trinn: Monteres slik at belysningen aktiveres når man går inn i trappen. Om ønskelig kan funksjonen "Hurtigstart" (se avsnitt 3.6) brukes til å slå på de tre første LED-utgangene slik at trinnene foran deg umiddelbart lyser opp.
2. Plassering av sensoren ca. 50 cm foran trappen: Ved montering rett før trappen aktiveres lyset et øyeblikk før man går inn i trappen. Dette har den fordel at de første trinnene allerede er opplyst når man går inn i trappen og man går ikke inn i et mørkt trinn.

**Andre installasjons instruksjoner:**

- Sensorene kan installeres hvor som helst mellom bakke-nivå og skulderhøyde, men er mest effektive enten direkte over trinn eller i hoftehøyde. En ledelinje er ca 20-50 cm over bakken/trinn.
- For å garantere optimal deteksjon, bør sensoren være installert slik at strålen skinner direkte på den motsatte overflaten.
- Sensorene kalibrerer seg selv automatisk til bredden, og kalibrerer hver gang systemet blir slått på.

- Sensorene bør beskyttes mot forurensning og kontakt, da dette ellers vil svekke sensorenes funksjon.
- Det anbefales å bruke den medfølgende sensorkabelen. Det er ikke tillatt å sløfye sensorkabelen gjennom flerlederkabler - sammen med LED-ledninger.
- Om mulig bør sensorkabelen legges separat fra andre kabler (230 V) for å unngå forstyrrelser i bevegelsesdeteksjonen.

## 2.2 Tilkobling av sensorer

Sensor for nederste trinn (LED kanal 1) skal være tilkoblet SENSOR 1, og øverste trinn til SENSOR 2.

De fargede merkingene på den medfølgende sensorkabelen må kobles til kontrollenheten samt til sensortilkoblingsadapteren som følger:

**grønn** = + positiv (5V sensor strøm)

**brun** = - negativ (jord)

**hvit** = S (sensor tilkobling)

## 2.3 Tilkobling av LED lyskilder

Kablene fra LED lysene festes til tilkoblingene på toppsiden til kontrollenheten. Det første lyspunktet (nederste trinn) skal kobles til terminal 1, det andre trinnet til terminal 2, og så videre. The connection leads of the LED illuminants are screwed on to the connection terminals located on top of the control unit. Polariteten finner du i grafikken på side 4, samt i merkingen på kontrollenheten. Den første LED-lyskilden i begynnelsen av trappen kobles til terminal 1 på kontrollenheten - alle ytterligere lyskilder kobles i den rekkefølgen de ble installert.

Juster modulen i henhold til antall lyspunkter/trinn - beskrivelsen for dette er gitt i avsnitt 3.1. Sørg også for en tilstrekkelig dimensjonering av ledertverrsnittet på 0,5 mm<sup>2</sup> eller større. Ytterligere informasjon: De positive polene brokobles internt ettersom de brytes gjennom jordingskontaktene.

## 2.4 Connection of the twilight sensor

The control unit supports the connection of an external light sensor to deactivate the control by day (page 4). A polarity is not to be considered when connecting the twilight sensor. For information on configuring the twilight sensor, see page 10 of this manual.

### **CAUTION!**

Not a potential-free connection! No voltage may be applied to these contacts!  
Only the connection of the "interactive furniture twilight sensor" is envisaged.

## 2.5 Connecting the external switch for the continuous light function

The control unit supports the connection of an external switch or relay (for example, a relay actuator of a home automation system) to activate the continuous light function (page 4). When the "ON" and "GND" contacts are connected, all connected LED illuminants are activated and remain active until the connections are disconnected. The sensor-controlled automatic is out of operation in this mode. When the continuous light function is activated, the green "STATUS" LED is lit continuously. See section 3.9.

### **CAUTION!**

Not a potential-free connection! No voltage may be applied to these contacts!  
Only the connection of the contacts via a switch is envisaged.

## 2.6 Connecting the power supply

The supply voltage (maximum 24V-DC) of the control unit is connected to the contact 16 of the overview graphic on page 4. The left plus pole supplies the control unit itself as well as the LED channels 1 to 10 -the right plus pole the LED channels 11 to 20. This allows - for the distribution of the connection load - the use of two separate power supplies (Attention: the Minus pole is internally pressed). The polarity can be found in the graphic on page 4 as well as in the labelling on the control unit.



## IMPORTANT:

- The supply voltage must be selected in accordance with the connected LED illuminants, since these can otherwise be damaged. Example: A 12V power supply has to be used for 12V LED strips.
- The supply voltage must not exceed 24 V (direct current).
- Use a power supply unit with sufficiently dimensioned output power.
- Make sure that the power supply is connected to the correct polarity.
- Connect both minus and both positive poles with the power supply unit, as otherwise the LEDs 11-20 are not supplied with voltage.

### **ATTENTION - DANGER TO LIFE!**

NEVER connect the control unit directly to the 230V power supply!

## 2.7 Correct use of the connection terminals

**LED control – LED outputs:** Single and fine-wire cables with a cross-section of max. 1.5 mm<sup>2</sup> can be used. We recommend the use of wire-end terminals – otherwise, isolate the cable over a length of 5 mm. Feed the cable into the screw terminal and screw it. Subsequently check the cable for a firm hold.

**LED control – spring-loaded terminals:** Single- and fine-wire cables with a cross-section of max. 1.5 mm<sup>2</sup> can be used. Isolate the cable to a length of 6 to 10 mm and insert it into the spring-loaded terminal. To close the spring clamp, simply move the eccentric lever downwards. Subsequently check the cable for a firm hold.

**Sensor connection adapter:** Single and fine-wire cables with a cross-section of 0.2 to 0.75 mm<sup>2</sup> can be used. Isolate the sensor connection cables to a length of 6-7 mm. The terminals on the sensor connection adapter can be opened by applying low pressure to the actuation press-ins – use the supplied tool. Insert the cables into the terminals. Subsequently check the cable for a firm hold in the terminal.

## 3 Configuration of the control unit

This section outlines the configuration options for the control unit. Please ensure that you have read the following information before starting up the control unit.



### 3.1 Entering number of stairs (STEPS)

The number of illuminated steps is entered using five switches ("STEPS") on the control unit (page 4, no. 3). All further channels of the control serve the ambient lightning function (see 4.1).

Please refer to the following table for the correct switch positions:

Number of steps	DIP1	DIP2	DIP3	DIP4	DIP5
5	Off	Off	On	Off	Off
6	Off	Off	On	Off	On
7	Off	Off	On	On	Off
8	Off	Off	On	On	On
9	Off	On	Off	Off	Off
10	Off	On	Off	Off	On
11	Off	On	Off	On	Off
12	Off	On	Off	On	On
13	Off	On	On	Off	Off
14	Off	On	On	Off	On
15	Off	On	On	On	Off
16	Off	On	On	On	On
17	On	Off	Off	Off	Off
18	On	Off	Off	Off	On
19	On	Off	Off	On	Off
20	On	Off	Off	On	On

With 6-channel LED expansion device					
	DIP1	DIP2	DIP3	DIP4	DIP5
21	On	Off	On	Off	Off
22	On	Off	On	Off	On
23	On	Off	On	On	Off
24	On	Off	On	On	On
25	On	On	Off	Off	Off
26	On	On	Off	Off	On

### 3.2 Calibrating the on and off switching speed

The speed of the switching on and off process of the light-emitting diodes can be adjusted separately with the "ON SPEED" and "OFF SPEED" controllers.

Turning the control dial "ON SPEED" in a counter clockwise direction slows the switching on speed of the LED-illuminants down to a maximum of one second per spotlight. When turned clockwise, this can be sped up this process to a minimum of 20 milliseconds per spotlight. The change in the "OFF SPEED" controller has an analog effect on the switch-off speed of the connected LEDs.

### 3.3 Calibrating of the pause between the switch-on and switch-off process

The "DELAY" slider is used to set the pause between the switch-on and the switch-off process. In this case, it is possible to select continuously between half a second (stop on the left) and about one minute (stop on the right).

### 3.4 Activation and calibration of the twilight sensor

If a twilight sensor is connected to the control unit, it is activated and adjusted via the "LIGHT" control. In the stop on the left the twilight sensor is completely deactivated and the automatic remains switched on even in daylight. When rotated clockwise, the light-automatic switches on only when darkness increases.

The "STATUS" LED goes out if the brightness value is exceeded and the automatic is thus deactivated. A blinking of the "STATUS" LED when the twilight sensor is activated indicates that the threshold value is below the threshold - the automatic is activate.

Important: Two minutes after activation of the control unit, this value is saved and from this point onwards only readjusts every 30 seconds. By using the RESET-switch the threshold value can be calibrated for a further two minutes. This function prevents the operating mode from changing "involuntarily" when the brightness changes briefly.

### 3.5 Function "1st step illumination"

With the switch 1 of the "FUNCTIONS"- switch panel the first and last LED-spot are switched on in a dimmed mode to illuminate the beginning of the staircase. The optional twilight sensor switches off the 1st step illumination during daytime.

### 3.6 Function "Quick Start"

In many installation situations it is not possible to place the motion sensor in front of the staircase. It can thereby it can happen that you enter the stairs with the first steps still unlit, with the lighting only subsequently catching up from the rear.

To prevent this, we have the developed the "Quick Start"-feature: The first stages are activated in increased speed for instant illumination. The switch 2 of the "FUNCTIONS"-panel activates this feature.

### 3.7 RESET-key

Pressing the RESET-key recalibrates the sensors. This becomes necessary if the setting on the sensors and control changes. This also occurs after each interruption of the control voltage supply.

### 3.8 TEST-key

By pressing the TEST-key, all connected LED-illuminants are activated.

### 3.9 Status-LEDs

To indicate the operation status of the control device, two LEDs are positioned in the front of the case (page 4, no. 1 and 2). As soon as the controller is connected to power, the red LED lights up. If this does not occur, disconnect the device immediately (see 4.2).

Additionally, the green STATUS-LED flashes each second and thereby signals the activity of the sensors. If the twilight function is activated, the green LED is illuminated constantly (see 2.5). If the twilight sensor function is activated and the brightness threshold is exceeded, the STATUS-LED stops and thereby signals that the automated mode is deactivated.

## 4 Further hardware features

### 4.1 Ambient lighting

The unused LED-channels (maximum 4, in the case of 10 steps, the LED-channels 11 up to 14) can be used for an additional, general illumination of the staircase. These channels are concomitantly dimmed on entering the staircase, and then disengaged with the last step - optimally suited for LED-strips in the banister or additional spots in the ceiling.

The optional twilight sensor deactivates the ambient lighting channel during daytime.

### 4.2 Internal fuses

Three fuses are installed to protect the control unit against short circuits at the sensor inputs or cables, exceeding of the maximum load of the control unit, incorrect installation, or a fault in the electronics. If the POWER-LED is not active while the unit is connected to the power grid, this indicates a blown fuse.

In this case the controller should be disconnected from the power supply immediately. The necessary electronics check and fuse replacement should only be performed by the manufacturer or a qualified professional.

Connecting cables should also be checked for defects, as well as the power supply for faults (Polarity reversal, wrong voltage).

Furthermore, every LED-output is secured with an additional 750mA resettable fuse. In case of a short circuit, this prevents the destruction of the control unit.

## 4.3 Bus connections

On the bottom side of the device, a bus system connector is installed to allow extension with additional modules. Please ensure that these contacts are neither short-circuited nor contaminated.

## 5 Further information

### 5.1 Correct usage

The control device is intended to be used for the activation 10V-24V LED-illuminants triggered by two infrared sensors connected to the device. Any other use is not covered by the terms of warranty.

### 5.2 Operating conditions and safety instructions

If there is any safety risk during operation the system should be deactivated and protected against unintentional reactivation.

This applies to:

- if the device shows visible signs of damage,
- if the device no longer functions,
- if a piece of the device is loose or no longer properly attached
- if the connecting cables show visible damage

The device should only be repaired by a qualified professional.

- Before opening the device, always ensure that it has been unplugged from the power supply. Power must be disconnected during installation.
- It has in principle to be checked whether the device is appropriate for the intended purpose and location before beginning installation. If uncertain it is recommended to consult a qualified professional or the manufacturer.
- Power conducting cables and wiring connected to the device should always be inspected for damaged insulation and breakages. If any wiring faults are detected, the device should be switched off immediately until the problem has been fixed.
- For reasons of safety and certification (CE), unauthorized alternations and modifications are not permitted.

- The acceptable ambient temperature (room temperature) during operation may not exceed or fall below the temperature range between 0°C and 40°C . If the temperature falls below the minimum operating threshold this can impair the fuse function and may damage the device in the case of a short circuit.
- The device is designed to operate in dry and clean environments. Use of the device outdoors or in damp rooms is not permitted.
- Protect the device and in particular the sensors from moisture, water splashes and heat sources like direct sunlight.
- The device should not be used in connection with easily flammable and combustible liquids. Do not operate the unit in an environment in which combustible gases, vapours or dusts are or may be present.
- The device, components and packaging do not belong in children's hands.
- The device should only be commissioned under the supervision of a trained professional or other qualified person.
- In commercial or public buildings, the device should be installed in accordance with national electrical accident prevention regulations.
- Ensure cables are installed so as not to cause accidents.
- If the device is no longer in use, it should always be disconnected from the power supply.

### 5.3 Disposal instructions

If the appliance has reached the end of its service life, take the old appliance to the collection point of your municipal waste disposal carrier. The control unit must not be disposed of via household waste.

### 5.4 Warranty and liability

This device comes with a three year warranty. The warranty covers free repair of defects which can be proven to result from defective materials or errors during manufacture.

We accept neither responsibility nor liability for direct or indirect damage in connection with this product.

We reserve the right to offer either repair, correction, delivery of a replacement or refund of the purchase price. Further reaching claims are excluded.

---

Interactive Furniture will not be held liable for operating and installation errors beyond our control. The warranty is deemed void and repair will not be carried out under the following circumstances:

- incorrect installation of the control unit
- alterations to the device or attempted repairs
- destruction of the warranty seal
- overloading of the device
- operation outside of the recommended operating temperature range
- damage due to inattention to operating instructions
- connection of incorrect voltage or power type
- incorrect polarisation of the device
- incorrect operation or damage from negligent use or misuse
- defects due to bridged or incorrectly installed fuses

## 5.5 EG-Conformity (CE mark)

The Company:

Interactive Furniture UG (haftungsbeschränkt)  
Koppel 14, Haus 2  
D-20099 Hamburg

declares with sole responsibility that the product:

Control unit "Advanced" in Version 3.5

to which this declaration relates is in accordance with the following standards and guidelines:

EN 55015 : 12/2006 + A1 : 5/2007 + A2 : 3/2009

EN 61547 : 8/2009

The technical documents are available for inspection at the above mentioned company upon request.